

# OPERATION FOR SOFTWARE INSTALL

SUPPORTS THE FOLLOWING OPERATING SYSTEM:

- WINDOWS 98SE
- WINDOWS ME
- WINDOWS 2000
- WINDOWS XP (32 & 64 BIT)
- WINDOWS SERVER 2003 (32 & 64 BIT)
- WINDOWS SERVER 2008 / 2008 (32 & 64 BIT)
- WINDOWS VISTA (32 & 64 BIT)
- WINDOWS 7 (32 & 64 BIT)

## Step-By-Step:


1. Install PC-LINK software.



2. Install USB driver.





3. Restart PC.
4. Put the USB cable to the PC USB port.
5. PC detected the COM.

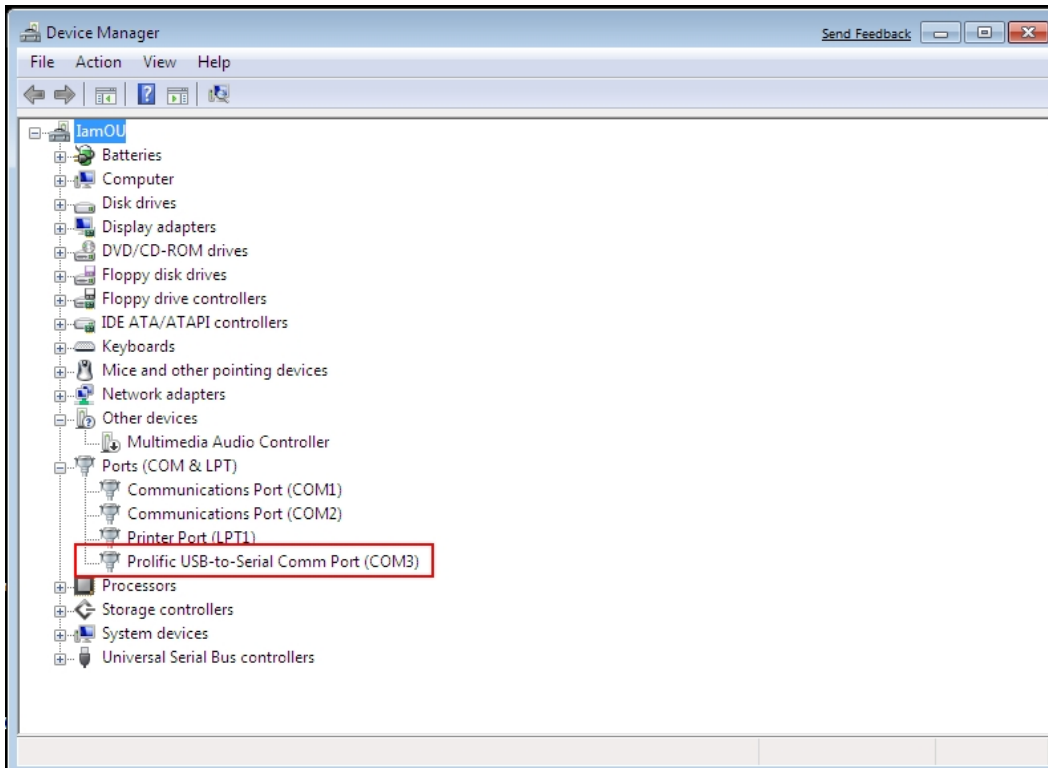

6. Run the PC-LINK software.


7. Set the right COM number in the software.

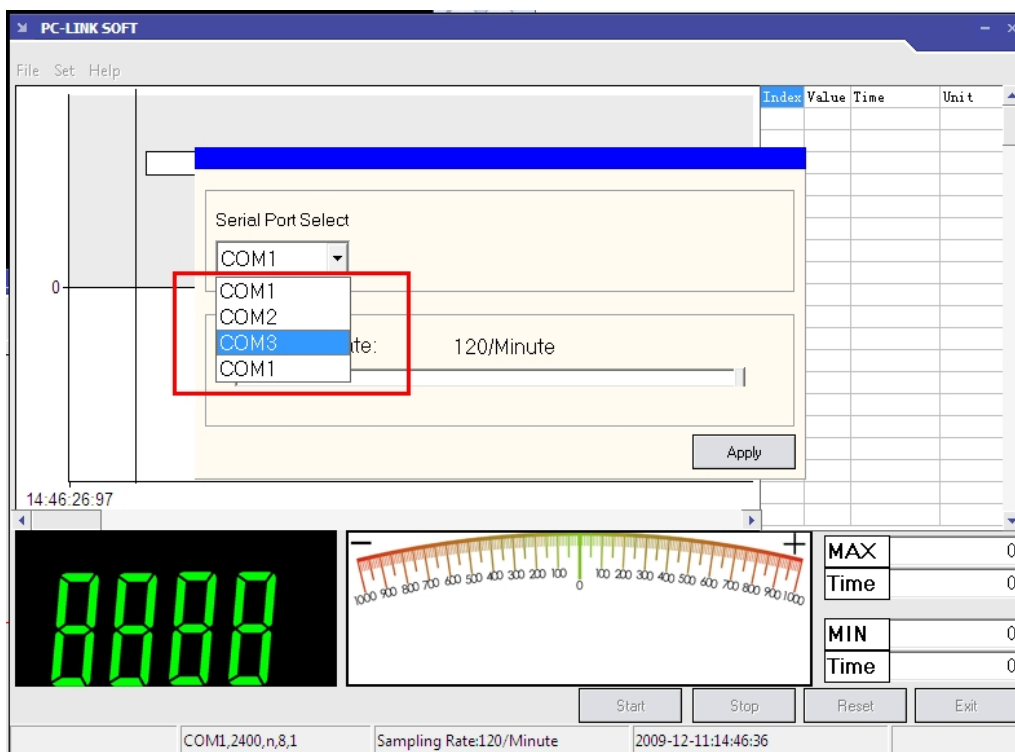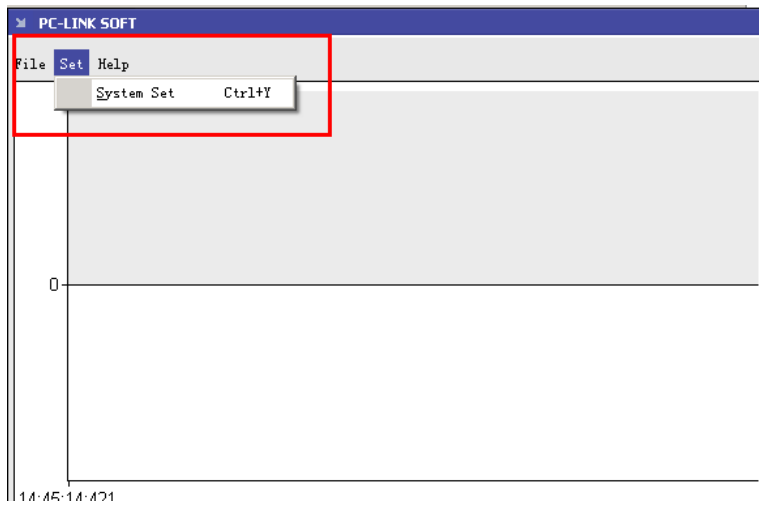


8. Connect with USB cable and DMM(meter).
9. Turn on the DMM and act the PC-LINK function.
10. Press the start button in the PC-LINK software.

Notice:

Ø Login with Administrators right in PC system.

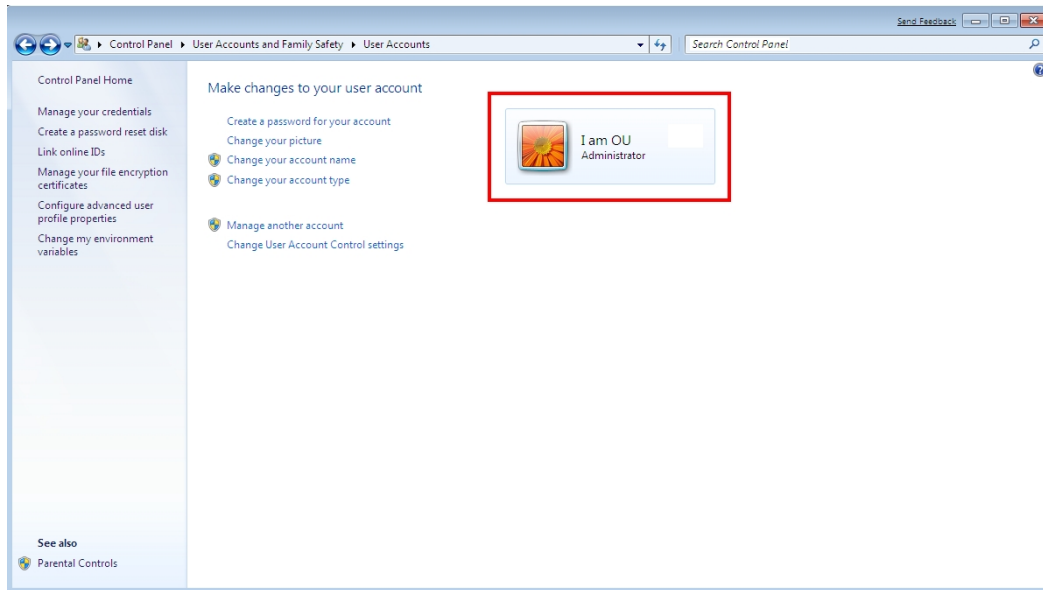

Ø If in the Windows Vista/Windows 7 system, must be disable UAC(User Account Control) function.

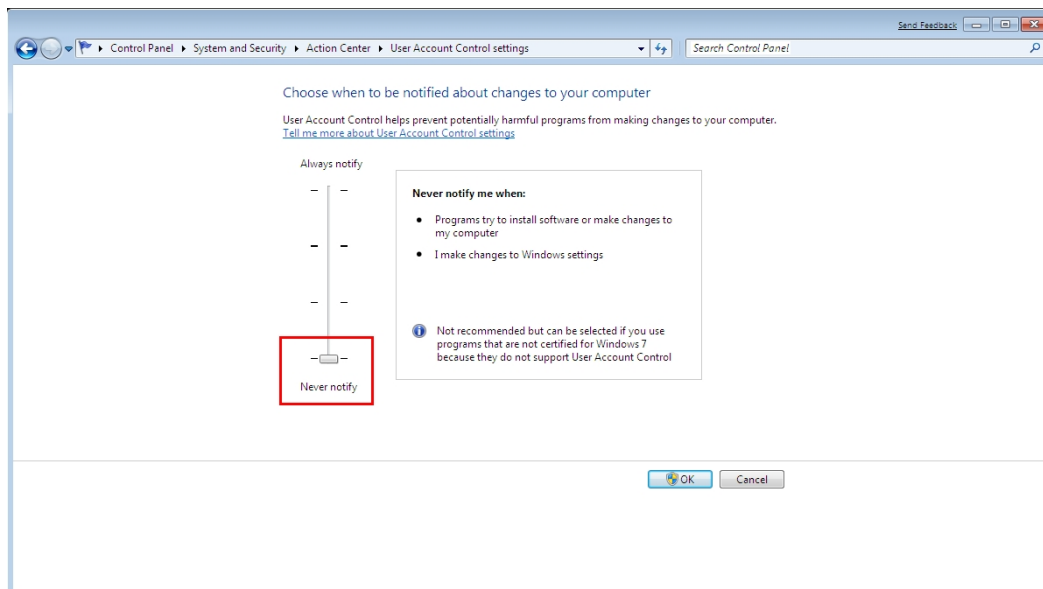

Ø Make sure the USB cable is have a good connection with the DMM.