


reaching the set temperature, if not means exceeding the set temperature, if flashing, means reaching the set temperature.

7. INTERNAL CONNECTION PICTURE

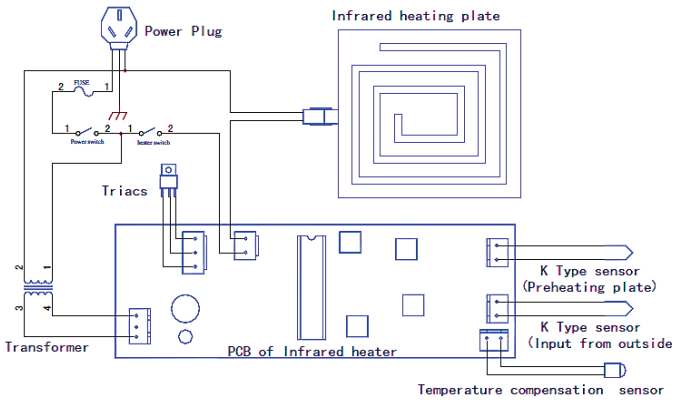

8. REPLACEABLE PARTS LIST

Item No.	Part No.	Part Name
1	25124	Infrared ceramic heater 600W/230V
2	251259	Infrared ceramic heater 600W/110V
3	25087	Fuse 5A/230V
4	25115	Fuse 10A/110V
5	47344	Controlling PCB
6	53005	Triacs BTA16/600B
7	45030	Rubber pad
8	25102	K type sensor TP-01
9	46235	Small size PCB fixture (Picture 3)
10	46233	Big size PCB fixture (Picture 2)